vtech® Baby

User's Manual

Baby's Laptop

© 2007 VTech

Printed in China

91-73803-000-006 (英)

Dear Parent,

We at *VTech* understand that a child's needs and abilities change as they grow and with that in mind we can develop our toys to teach and entertain at just the right level. Babies need toys that will stimulate their interest in different textures, sounds and colours, while on-the-go toddlers and pre-schoolers want more interactive toys to develop their imaginations and encourage their language development. As they progress to more challenging curriculum at school, *VTech* keeps pace with a wide variety of cool, aspirational and interesting computers for learning. Every toy is unique and helps your child develop in different ways for the best all-round learning.

vtech®

Very interactive... Very clever... Very VTech!

6-10 years

Electronic Learning Computers

I need...

...challenging activities that can keep pace with my growing mind
...cool stuff to keep me entertained, busy and up-to-date
...intelligent technology that adapts to my level of learning
...National Curriculum-based content to support school teaching
...space to be flexible and creative and to find my own style

3-6 years

Pre-School

I want...

...toys that let me pretend to be a grown-up so I can learn how the world works
...to get ready for school by starting on the alphabet and counting
...great games that keep me interested and make me laugh
...my learning to be as fun, easy and exciting as can be
...to show my creativity with drawing and music so my whole brain develops

0-36 months

vtech Baby

I am...

...exploring, learning and understanding the world around me
...experiencing and responding to colours, sounds and textures
...understanding cause and effect
...learning to move, touch, reach, grasp, hold, wiggle, sit up and crawl
...understanding what people say and beginning to respond
...interacting with toys and developing my own imagination

To learn more about *VTech* toys, visit **www.vtechuk.com**

INTRODUCTION

Thank you for purchasing the **VTech® Baby's Laptop**!

Learning is just a click away with the Baby Laptop! 9 chunky push buttons interact with the light-up screen to teach basic early learning concepts in a fun and engaging way. 3 modes of play keep the fun going for longer, teaching objects, sound effects and shapes. 8 directional click-tick mouse and buttons help to develop fine motor skills as well as introducing early computer skills.

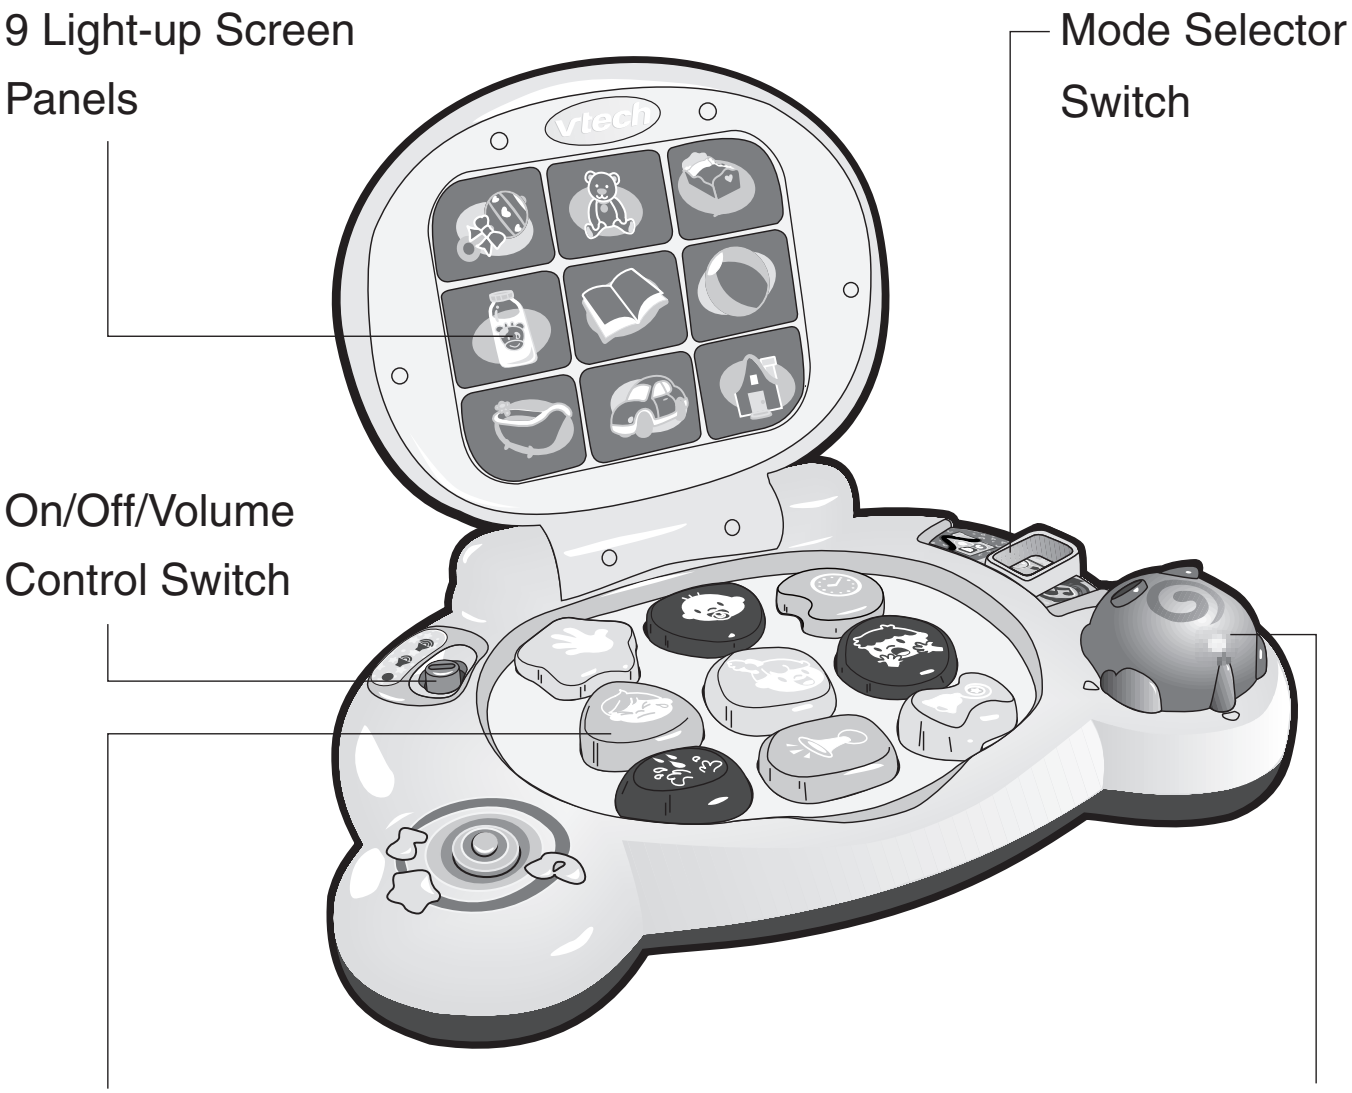

INCLUDED IN THIS PACKAGE

- One **VTech® Baby's Laptop**
- One User's Manual

WARNING: All packing materials, such as tape, plastic sheets,wire ties and tags are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover at the back of the unit. Use a coin or screwdriver to loosen the screw.
3. Install 2 new 'AA'(UM3/LR6) batteries following the diagram inside the battery box.
4. Replace the battery cover and tighten the screw to secure.

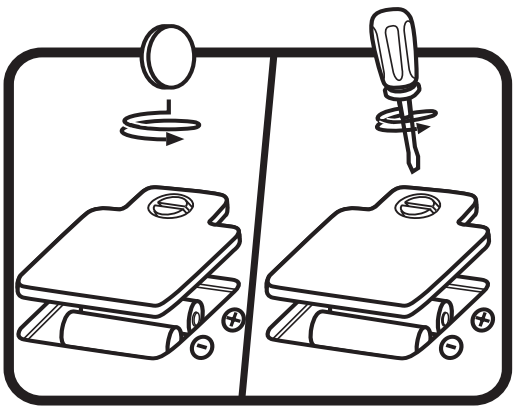

BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Different types of batteries, or new and used batteries are not to

be mixed.

- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than the recommended number of power supplies.
- Do not dispose of batteries in fire.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **On/Off/Volume Control Switch** to the **low volume** (🔉) or **high volume** (🔊) position. To turn the unit **OFF**, slide the **On/Off/Volume Control Switch** to the **OFF** (●) position.

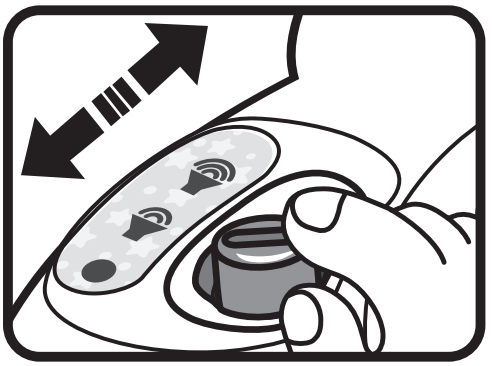

2. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Baby's Laptop** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any shape button or moving the mouse.

ACTIVITIES

1. Slide the **On/Off/Volume Control Switch** to turn the unit **ON**. You will hear a fun sound effect and 'It's my home computer' and the sung song. The lights will flash with the sounds.

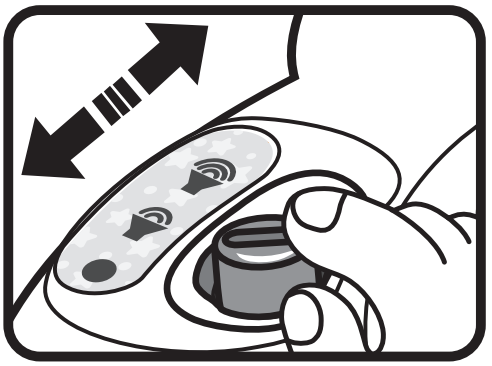

MODES OF PLAY

LEARNING MODE

2. Press the **LEARNING MODE BUTTON** to enter the **LEARNING** mode of play. Press any of the **9 Shape Buttons** once to hear shape name and random melody. Press a second and a third time to hear more picture names. Interesting sound effects attract baby's attention to touch and learn and a variety of light patterns will flash with the sounds.

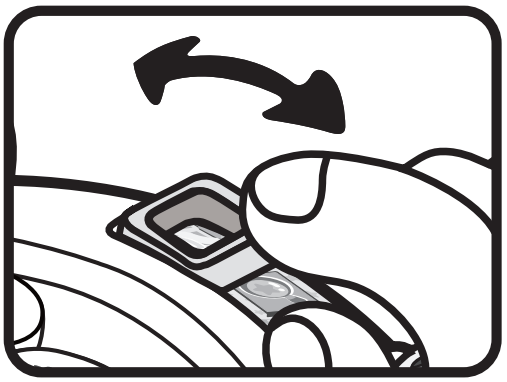

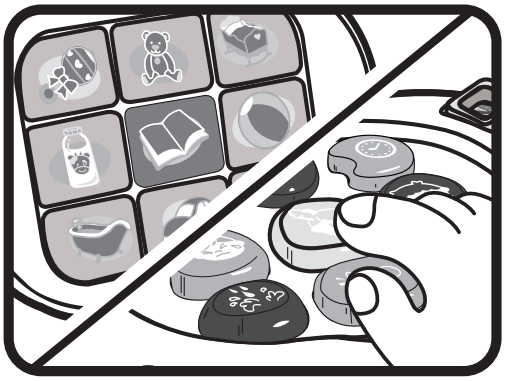

DISCOVERY MODE

3. Press the **DISCOVERY MODE BUTTON** to enter the **DISCOVERY** mode of play. Press any of the **9 Shape Buttons** to hear friendly phrases, fun sounds and the sung song. A variety of light patterns will flash with the sounds.

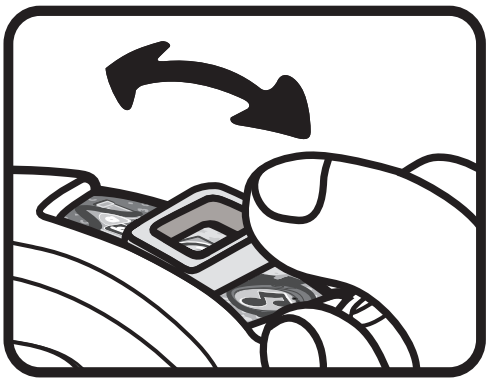

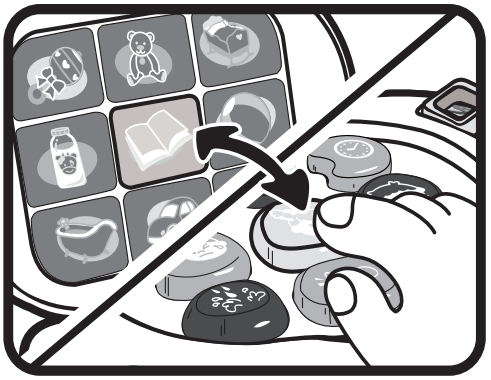

MUSIC MODE

4. Press the **MUSIC MODE BUTTON** to enter the **MUSIC** mode of play. Press any of the **9 Shape Buttons** to hear fun melodies and flashing lights. Move the **Mouse** to jam sound effects into the melody.

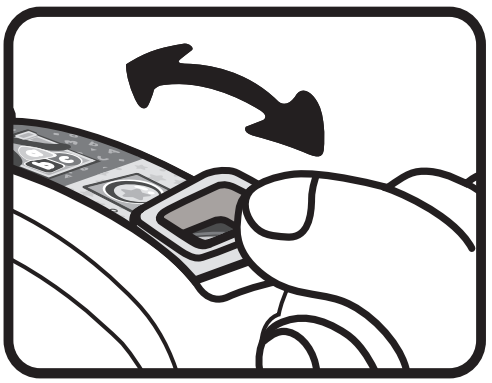

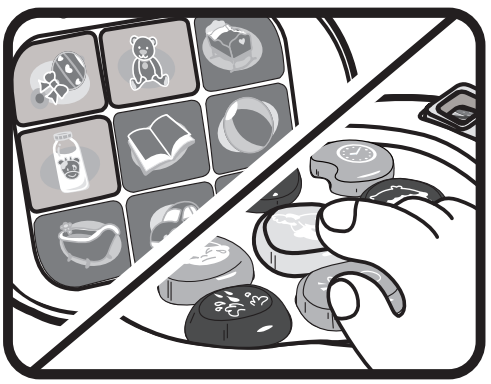

5. If the unit is **ON**, with the lid open, the mouse can move in eight directions with corresponding sound effects. Lights will flash with the sounds. If the lid is closed, and the mouse is moved around, you will hear ‘let’s go home’, ‘let’s explore’ or ‘I like music’ to invite you to play depending on the mode selected.

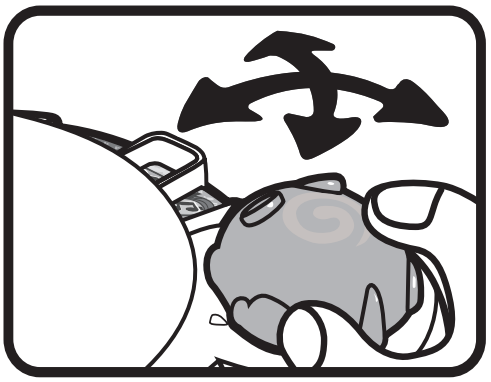

6. If the unit stays **ON**, with the lid open, you will hear one phrase depending on the mode position. Close the lid and you will hear ‘goodbye’ followed by one sound effect.

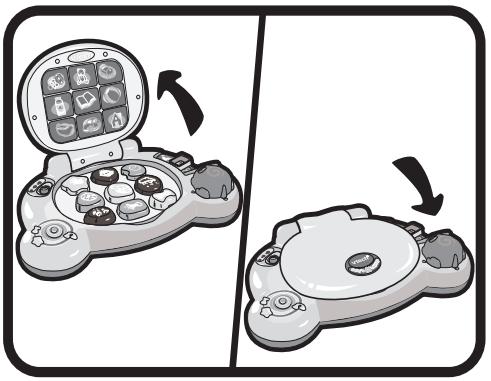

7. If there is no input to the unit after approximately 10 seconds, you will hear ‘Are you home?’ After another 10 seconds, if there is still no input, you will hear the Sung song and a fun phrase. If there is still to be no input to the unit, you will hear ‘shutting down now. Good-bye’, then it will automatically power-down.

MELODY LIST

1. Twinkle, Twinkle, Little Star
2. Mulberry Bush
3. Brahms' Lullaby
4. Pease Porridge Hot
5. Bingo
6. Pop! Goes the Weasel
7. Row, Row, Row Your Boat
8. Skip to My Lou
9. This Old Man

SUNG SONG LYRICS: (To the tune of "Yankee Doodle")

My first laptop is so fun.

It's made just for me-ee.

Learning all about my home.

Come along and see-ee.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on (01235) 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

vtech®

PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
   Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK only. For products purchased outside the UK, please contact your local distributor or place of purchase.

To win a fantastic prize, join the VTech club online at www.vtechuk.com